

Use and Care Guide


Air Diffuser



TOOLS REQUIRED



Utility Knife

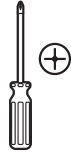

Phillips screwdriver



Pencil

HARDWARE REQUIRED (NOT INCLUDED)




Screws (4)

Installation


1 TRACING THE HOLE

- Using the flange (A) collar as a template, trace the hole opening at the installation location with a pencil.

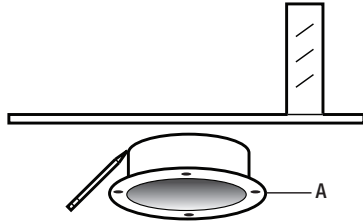


2 CUTTING THE HOLE

- Using a utility knife, cut the hole by following the outline, and insert the flange (A) into the opening, ensuring it is flush with the wall or ceiling.

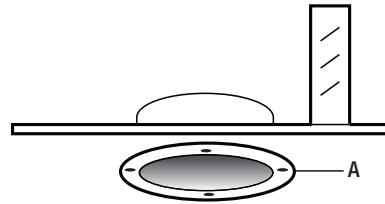


3 ATTACHING THE AIR DIFFUSER TO A DROP CEILING

- Pull the locking ring (B) around the flange collar (A) and insert the air diffuser (C) into the flange (A). Adjust the airflow as needed.

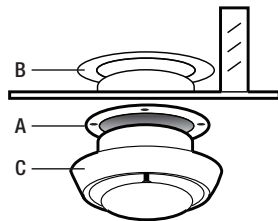

4 ATTACHING THE AIR DIFFUSER TO A DRYWALL CEILING

- Secure the outer facing of the flange (A) to the drywall using screws. Insert the air diffuser (C) into the flange (A). Adjust the airflow as needed.

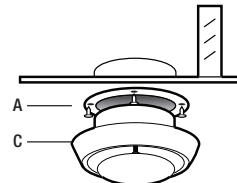

Safety Information

If you are using a rigid duct with your installation, ensure it is securely fastened to the stud. The diffuser inserts directly into the duct opening. No flange is required.

Warranty

WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.DundasJafine.com.