


Use and Care Guide

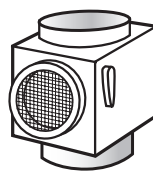

Dryer Vent Heat Keeper

TOOLS REQUIRED



Wire Cutters



Utility Knife

HARDWARE REQUIRED (NOT INCLUDED)



Adjustable clamp

Installation


1 CUTTING THE EXISTING DUCT

- Cut the existing duct attached to the dryer about 10 in. above the top control panel of the dryer.




2 ATTACHING THE DUCT FROM THE DRYER TO THE HEAT KEEPER

- Slide the free end of the duct coming from the dryer over the bottom collar of the Heat Keeper. Secure it with an adjustable clamp.

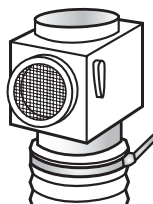

3 ATTACHING THE DUCT FROM THE PIPE TO THE HEAT KEEPER

- Slide the free end of the remaining duct leading outside over the top collar of the Heat Keeper. Secure it with an adjustable clamp.

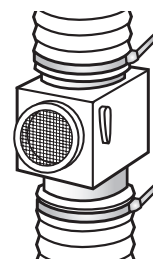

4 SETTING THE HEAT KEEPER FOR WINTER MODE

- Set the Heat Keeper (pull and turn damper) in the up position during the winter season to add heat and humidity into the home through the lint filter.



5 SETTING THE HEAT KEEPER FOR SUMMER MODE

- Set the Heat Keeper (pull and turn damper) in the down position during the summer season to redirect heat and humidity from the dryer, directly outdoors.



Note

For maximum efficiency, clean the lint filter cap before each use.

Warranty

WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.DundasJafine.com.