Use and Care Guide Semi-Rigid Aluminum Duct





TOOLS REQUIRED	HARDWARE REQUIRED (NOT INCLUDED)
Screwdriver Utility knife	Wormgear clamps (2)
Installation	
1 OBTAINING THE MAXIMUM DUCT LENGTH	2 STRETCHING THE DUCT
 We recommend using two people to stretch the duct and obtain the maximum length 	 Stretch the semi-rigid duct to the required length by carefully pulling, while slightly twisting the duct
3 ATTACHING METAL CLAMPS	4 INSTALL TO EXISTING APPLIANCE
 Slide an appropriately sized worm drive clamp over each end of the duct 	AND DUCTWORK
over each end of the duct	 Slide the duct over the appliance outlet and existing ductwork and tighten the worm drive clamp
\rightarrow	
↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	
Warranty	

WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit www.DundasJafine.com.